

**SHENZHEN ATTEN TECHNOLOGY CO., LTD.**

---

- Soldering Iron ●Soldering Station ●Hot Air Rework Station
- Multi-function Rework System ●BGA Rework System
- Regulated DC Power Supply ●Switching DC Power Supply
- Programmable Power Supply

# ATTEN

---

**AT852D**

---

**Hot Air Station**

---

**USER'S Manual**

---

**SHENZHEN ATTEN TECHNOLOGY CO., LTD.**

Add: Floor 8, Building 2, Senyang High-tech Park, 7 West Road  
High-tech Park, Guangming New district, Shenzhen 518132, China

Tel: +86-755-2697 6387

Fax: +86-755-8602 1337

Web: [www.atten.com.cn](http://www.atten.com.cn)(CN)

[www.atten.com](http://www.atten.com)(EN)

Email: [sales@atten.com.cn](mailto:sales@atten.com.cn)

MADE IN CHINA

CBN027577(E)

**SHENZHEN ATTEN TECHNOLOGY CO., LTD.**

## Content

Content.....	1
Copyright.....	2
Symbols and Conventions.....	2
Assumption for User.....	2
Safety.....	2
Disclaimer.....	3
Item Check List.....	3
Product Overview.....	3
Features.....	3
Specification.....	3
First Glance.....	4
Operational Guide.....	4
Maintenance.....	5
Service Contact.....	5

### Warranty

This product warranty period cover 24 months from the day this product purchased. We will make free maintenance for any quality problem itself if this warranty and receipt provided. We will repair and return your device within 2 workdays after receiving repairing-required device.

Note: please attach this warranty card if you want your device to be repaired without charge.

### Certificate of Product

Model: \_\_\_\_\_ Product NO.: \_\_\_\_\_

QC: \_\_\_\_\_ Production date: \_\_\_\_\_

Sales clerk: \_\_\_\_\_ Sale date: \_\_\_\_\_

operating it as the indicator start twinkling which shows that real temperature of hot air has reached the preset temperature.

- 3.3 Please place hot air gun handle on supporting stand after soldering work completed or not-using temporary. Please switch power off for long time of no operation.
- 4 Settings
  - 4.1 User can adjust working temperature by tuning temperature setting knob. Then LED display screen will show real air temperature of nozzle after displaying setting value for 3 seconds.
  - 4.2 You can set the knob to adjust the air flow, and air flow gradation will be showed by LED numbers. The device will display real temperature 2 seconds later. Air flow gradations: A25~A99, from low air flow to high air glow.
5. Malfunction indication
  - 5.1 Displaying of "S-E" indicate malfunction probably is caused by sensor open loop or exceeding of maximum working temperature.
  - 5.2 Displaying of "H-E" indicate malfunction probably is caused by sensor short circuit or heating element open loop.
  - 5.3 Displaying of "C-E" indicate zero-crossing malfunction.
- 6 Power off  
The device will not power off right after turning switch off and it will continue blow air until air temperature is lower than 100°C which was designated for protect soldering gun.

## Maintenance

### Replacing heating element

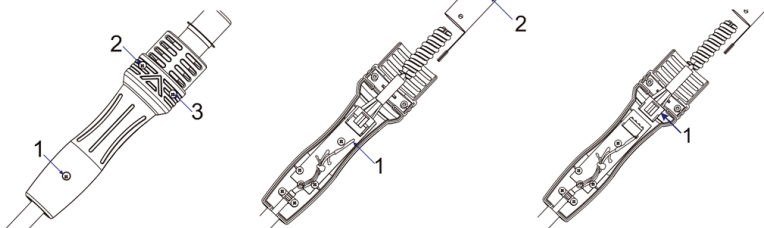


Figure 1

Figure 2

Figure 3

- 1 Switch power off and let it cool down for hot air gun.  
Unscrew 3 screws used to fasten handle (Part 1,2,3 of Figure 1) to move conduit out.
- 2 Open handle(Figure 2)  
Separate grounding wire sheath, Remove protective tube
- 3 Separate heating element end, then take heating element out.
- 4 Plug a new heating element and reconnect wires with attention to circuit polarity( please take care ! this step is important )
- 5 Assemble handle in reversed disassembling order.

## Service Contact

Service Department TEL: +86-755-26976387

## Copyright

The design of this product (including software) and its accessories is under tutelage of laws. Any action to violate relevant right of our product will be penalized through law. Please consciously observe relevant local laws in the use of this product.

## Symbols and Conventions

Thank you for purchasing this soldering station product. Please read this manual carefully and pay attention to warnings and precautions mentioned herein before using this product.

	<b>Warning you against the risk of electric shock.</b>
	<b>Warning you against the risk of physical injury.</b>

## Assumption for User

We assume that user have common sense and basic relevant electrical operation knowledge before using this product. This device is not intended for use by persons (including children) with limited physical, sensory or mental aptitude, or by persons who lack knowledge or experience in handling the device.

## Safety

- User must observe following rules while using this product to avoid electric shock, physic injury or fires and other damage.
- To ensure personal safety, user must use approved or recommended parts and accessories. Otherwise it will lead to serious consequences!
- Maintenance or repairing work must be carried out by qualified technician or assigned man by our company.

**Attention:** This product uses three-wire grounded plug which must be inserted into three-hole grounded socket. Do not replace plug or use ungrounded three-hole adapter which will cause poor grounding.



**WARNING:** Improper operation will cause injury, fires and other accidents due to that surrounding temperature of nozzle could reach 480°C. So be sure to observe following precautions.

- Do not aim hot air gun at human or animals. Do not take hot air gun as hairdryer, touch heating tube or blow skin.
- Never use this product around flammable gas and other objects and never place hot air gun near flammable gas or objects after soldering work.
- User must switch off power immediately after each operation. Power will not been truly cut off if the temperature of hot air gun is above 100°C until the temperature of hot air gun is below 100°C.
- Be careful while using hot air gun. Do not drop, shake rework station, put heavy object on rework station and use rework station violently.
- Do not use this product while hand or cord of hot air gun is wet to avoid short circuit and electric shock.
- Keep this product out of reach of children.
- Use approved nozzle by manufacturer and do not try to modify it.
- The temperature will be different as nozzle changed which is normal and it is not problem of product quality.
- Pay attention to input voltage while use hot air gun which provided by manufacturer with different specification and user should choose it carefully.
- Never play with others while using this product which will cause injury to others or yourself.

## Disclaimer

- For physical injuries and possessions loss caused by those reasons which are not related to product quality such as operating without following manual guide, natural disasters or force majeure, we take no responsibility for that.
- Under the supervision of Shenzhen ATTEN Technology Co., Ltd, this manual has been compiled and published which covered the latest product description and specification. The content of this manual is subject to change without notice.

**ATTENTION:** To avoid damaging to unit and keep operation safe, please read the instruction manual ahead and keep it accessible for any operator.

## Item Check List

Name	Quantity
Hot air station	1 Set
Hot air gun holder	1 Set
Hot air gun	1 PCS
Manual	1 Copy
Power cord	1 PCS
Nozzle	2 PCS (A1130,A1170A)

## Product Overview

AT852D is a lead-free desoldering rework station with MCU controller and LED digital display. It has being widely used in business research & development center, colleges & universities, research institutes and production line.


## Features

- Knob control and LED display make work easy.
- High power diaphragm pump with high pressure make it suitable for various nozzles.
- Patented heater for obtaining fast heating-up and extending lifespan.
- Fahrenheit temperature or Celsius temperature (only be set in manufacturing process) .
- Intelligence cooling system and deferred power-off function to extend handpiece lifespan.
- Malfunction alarming function make convenient operation.

## Specification

Model	AT852D
Power source	AC(100V/110V/120V   220V/230V/240V) 50/60Hz(optional)
Power consumption	550W
Display	LED digital display
Temperature range	100℃~480℃
Air flow grade	A25~A99 grades
Pump	Diaphragm pump
Noise	<52dB(A)
Air flow	23L /min(Max)
Net weight	3.2Kg

## First Glance

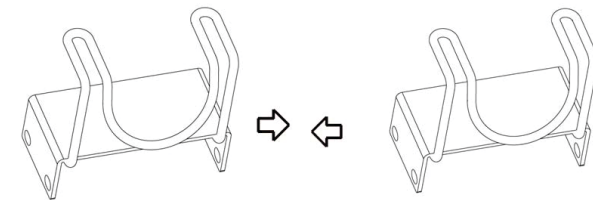

PM3\*6  
Installed on left side

PM3\*6  
Installed on right side

## Operational Guide

- 1 Installation
  - 1.1 User should install handle stand of hot air gun supporting stand according to user's personal operation habits, on left side or on right side as schematic representation shows, for your first operation on this product. Then check it favorable for you after you put handle on handle stand.
- 2 Connection
  - 2.1 Place hot air gun handle on supporting stand.
  - 2.2 Plug power cord into a power socket.
- 3 Power-on
  - 3.1 Switch power on. Please confirm again that power supply being used is conforming to the specifications of this product.
  - 3.2 Setting temperature and adjusting airflow. LED display screen will show real air temperature of nozzle after displaying setting value for 3 seconds. User can start